



425-6648
'18+ Ford F-150
SSV/Police Responder

Installation Instructions



Unsnap speaker cover from each side corner to remove (2) 7mm screws.



Pry the top tray up from each front corner and remove the (2) 7mm screws. Unplug speaker from the harness.



Pry from the top to unsnap the trim covering the radio and climate controls. Unplug the heater control from the harness.



Remove the left and right climate sections containing the 12" volt plug and the 4x4 knob selector, unplugging each from the wiring harness.



Remove (1) 10mm screw holding the lower trim in place rotate over the transmission hump and unsnap from the passenger side.




Remove lower panel containing 12 volt power and USB by unscrewing (2) 7mm screws on the top and (2) 10mm screws on the bottom. Unplug accessories from harness.



Install the Console Support Bracket with the previously removed 7mm and 10mm OEM screws from step 6.



Replace trim components that were removed in steps 1, 2, 3 and 4.

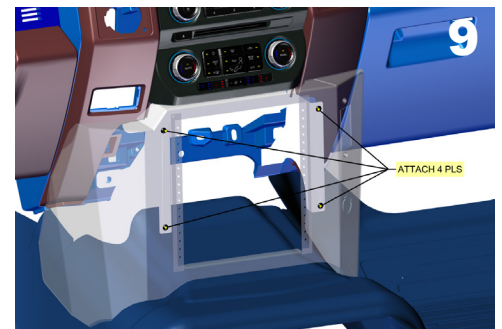

Attach the Console to the Console Support Bracket with provided hardware.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886

209 W. EASY ST., ROGERS, AR 72756 • WWW.EVERYTHINGBUTLIGHTS.COM • 03/18



Jotto Desk® is a patented product and Registered Trademark of Assembled Products™ Corporation. Contour Console™ has design and utility patents. Additional Patents Pending. Specifications subject to change without notice.