


**425-6691
'11+ Caprice
9C1 Console**

Installation Instructions

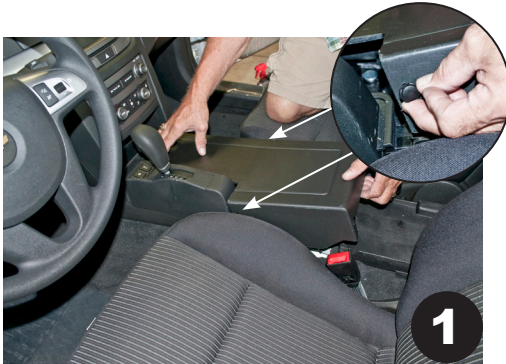

1
Remove OEM center console cover by remove side clips (see photo for location), and then pull up on plastic to release snaps.



2
Remove 13mm nuts from the side of the transmission hump between seats and console. Two per side.



3
Install mounting brackets using the 13mm OEM nuts from previous step. Making sure to use the correct bracket on each side. Large hole on bracket goes toward rear of console.



4
Replace OEM Console and clips. Refer back to step one for clip location.



5
Remove 10mm bolts at the rear of the OEM floor plate. One per side.



6
Install Caprice console by sliding rear extended brackets under plastic flange piece of OEM floor plate. Then push downward to seat the Caprice console onto the OEM console making sure the mounting brackets sit inside console. Secure rear extended brackets using 10mm OEM bolts. One per side.



7

PSS
PUBLIC SAFETY SOURCE
WWW.PUBLICSAFETYSOURCE.COM
1-866-587-4661

